



CĐ		

REVO

REVO


GENERAL DESCRIPTION

- Revo S has been specifically designed to save space and labour
- These simple units can be connected with REVO PC to manage multizone system this minimize your energy cost by controlling synchronization and power limit on each zone
- All circuit board, Fuses and Thristor can be inspected just opening the front door
- Input signal: SSR, Analog as an option
- Zero Crossing, Burst Firing available at 4, 8 or 16 Cycles at 50% of Power demand
- Electronic fully isolated from power with constant current drain on input.
- Heater Break alarm option to diagnose partial or total load failure and Thyristor Short circuit
- Fixed Fuse available as standard
- Current transformer integrated (with Heather Break option)
- Special design for Heat sink with very high dissipation value
- Comply with EMC, cUL (pending)
- DIN RAIL side by side mounting
- IP20 Protection

TECHNICAL SPECIFICATION

REVO

Voltage power supply	24V minimum up to 480V, 600V On request						
Voltage Frequency	50 or 60 Hz no setting needed from 47 to 70 Hz						
Nominal Current	60A, 90A, 120A, 150A, 180A, 210A						
Input Signal	SSR for REVO S, No Fuse, 5:30Vdc 18mA Max (On > 5vdc Off < 4vdc); SSR for REVO S, Fuse + Fuse Holder 7:30Vdc 18mA Max (On > 7vdc Off < 6vdc);						
Firing	Zero Crossing, Burst Firing with analog input signal only						
Auxiliary Voltage Supply	12:24V dc/ac (max 70 mA) required only with HB Alarm or Analog Input Option						
Heater Break Alarm	Microprocessor based with automatic setting via Digital Input; Relay Output 0,5A at 110V						
Mounting	Panel mounting						
Operating Temperature	40 °C without derating. Over this temperature see below derating curve						
Storage temperature	-25 °C to 70 °C Max						
Altitude	Over 1000 m of altitude reduce the nominal current of 2% for each 100m						
Humidity	From 5 to 95% without condense and ice						

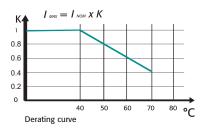

1

OPTION'S FEATURES AND SPECIAL DETAILS

HEATER BREAK ALARM (HB)


ON FRONT CABINET




FEW SECOND TO SET AND CALI-BRATE ALL THE UNITS

- Microprocessor based circuit
 - · Capacity to diagnose the failure of one Resistance over five in parallel
- Load failure alarm with LED indication on front unit
- Thyristor short circuit alarm with LED indication on front unit
- Alarm output with free voltage relay contact
- Alarm reset function and possibility to auto reset if the alarm disappear
- Built in Current transformer when heater Break option has been selected
 - Self Setting via external command or push button on front unit
 - Commom setting command can be given to many units and in a matter of second, the tuning is done, also by a non expert operator

HOW TO ADD POWER LOAD MANAGMENT AND FEATURES TO YOUR SIMPLE UNITS

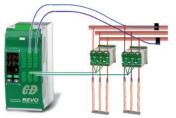

APPLICATION WITH 8, 16 OR 24 THREE-PHASE LOADS

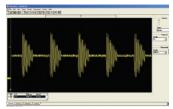

WITHOUT POWER CONTROL OPTI-MISATION



WITH POWER CONTROL OPTIMISA-TION

Use REVO-PC and you can add these Features

- Communication with different field bus
- Reading of current Voltage and Power
- Istantaneus power very close to average value, no pick power
- Power factor close to one no harmonics
- Prevents increase in energy supply tariffs imposed by your electricity supplier

Synchronization

On all controlled zones, REVO-PC Synchronization is automatic resulting in superior performance:

- Total current is equal to a sinusoidal wave form.
- Power factor > 0,9.
- Instantaneous current close to average value.
- Cancellation of harmonics.
- Flickering effect removed.

Smart power limitation

- Smart power limitation works together with synchronization. If this function is enabled, REVO-PC makes a live calculation of power at each period and generates the output values for the next period. If the calculated power is below the power limit value, the previous values remain with each channel using full power.
- If the power is above the power limit value, the setpoint of each channel is reduced proportionally to restrict power overshoot. This function significantly reduces disturbances on the main network compared to a full power system, preventing any increase in energy tariffs imposed by the electricity supplier.
- This function can be activated/deactivated and the limit value changed at any time.


ORDERING CODES REVOS PC

		1	2	3	4	5		6	7	8	9	10	11	12	13	14	15	16
REVO-P	۲ C	R	P	C	_	_	-	_	_	_	_	_	_	_	_	0	0	0
4,5 Cha	nnels	7	'	Comm	unica	tion		9		Firing	5			12		Manu	als	
Description code	Numeric code	1	Descript	ion code	N	umeric o	code	De	scription	code	Num	eric cod	e	Descr	iption co	ode	Numeri	c code
8 Channels (for 8 Off			Ethe			1			Cycle a						None		C)
one phase unit)	0 8		ModBu			2			wer den		_	1			in Manu	-	1	
16 Channels (for 16 Off				Master		3			Cycle a					<u> </u>	sh Manu		2	
one phase unit)	16		Prof			4		power	demand	dModBus	5	2			an Man		3	
24 Channels (for 24			Prof	inet		5								Fren	ch Manu	ıal	4	
Off one phase unit)	2 4							10		Feed	Back							
8 Channels for 2-3PH	38	8	- F	Primary				De	scription	code	Num	eric cod	e	13		Versi	on	
				Transf	formei				lo feedb			1		Descr	iption co	ode	Numeri	c code
6 Current	Sensor		Descripti	on code	N	umeric c	ode		Power			2		Ve	ersion 1		1	
Description code	Numeric code	T	ransforr	ner 24V	/	1												
50/0,05 A	1		90:1	30V		2		11		Appro	ovals							
100/0,05 A	2		170:	265V		3		De	cription	code	Num	eric cod	e					
150/0,005 A	3		230:	345v		4			CE EM			1	_					
200/0,05 A	4		300:	530V		5			CL LIVI	.		•						
250/0,05A	5		510:	590V		6												
400/0,05A	6		600:			7												
80070,05A	7		500.			,												

WIRING CONNECTION REVO S 3PH from 60A to 210A

(1)ь3 1.2 Μ1 SSR Input Only ПГ GÐ * SSR input only [SSR Analog Input or SSR Input with HB REVO AUX 12-24V ac/do CAL Ext. 12-24Vde ÷ (2) CT+HB opt HB A тз TO LOAD dc / 4-20mA

REVO S 3PH from 60 to 90A

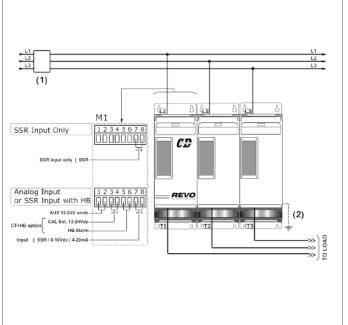

REVO S 3PH from 120 to 210A

LOAD TYPE



OPEN DELTA Resistive or Infrared Lamps Long and medium waves

LOAD TYPE


*

N

STAR with neutral Resistive or Infrared Lamps Long and medium waves

NOTE

- (1) A suitable device must ensure that the unit can be electrically isolated from the supply, this allows the qualified people to work in safety.
 - The user installation must be protecting by electromagnetic circuit breaker or by fuse isolator. The semiconductor fuses are classified for UL as supplementar protection for semiconductor.
- (2) The heat-sink must be connected to the earth.

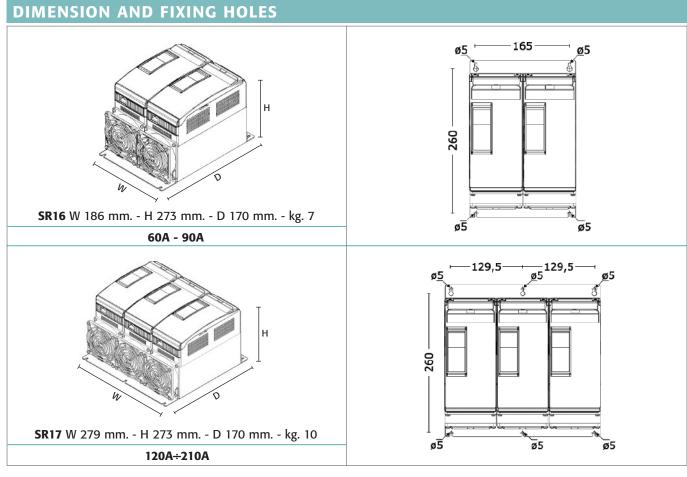

OUTPU	OUTPUT FEATURES (POWER DEVICE)									
Current A	Voltage range (V)	reverse	ve peak voltage (600V)	Latching current (mAeff)	Max peak one cycle (10msec.)	Leakage current (mAeff)	I2T value for fusing tp=10msec.	Frequency range (Hz)	Power loss I=Inom (W)	Isolation Voltage Vac
60A	24÷600V	1200	1600	450	100	15	4750	47÷70	195	2500
90A	24÷600V	1200	1600	450	2000	15	19100	47÷70	251	2500
120A	24÷600V	1200	1600	450	1540	15	11300	47÷70	414	2500
150A	24÷600V	1200	1600	450	2000	15	19100	47÷70	486	2500
180A	24÷600V	1200	1600	300	4800	15	108000	47÷70	534	2500
210A	24÷600V	1200	1600	300	5250	15	128000	47÷70	606	2500

Fan Specification	
Supply: 230V Standard	Input Power 16W
Supply: 115V Option	Input Power 14W

ORDERING CODES REVOS 3PH

	1	2	3	4	5	6		7	8	9	10	11	12	13	14	15	16	
REVO S - 3PH	R	S	3	_	_	_	-	_	_	_	_	_	_	_	_	_	_	

4, 5, 6 Current							
Description c	ode Numeric code						
60A	060						
90A	090						
120A	120						
150A	150						
180A	180						
210A	210						
7 N	lax Voltage						
Description c	ode Numeric code						
480V	4						
600V	6						

8	Aux. Voltage supply										
De	scription code	Numeric code									
No	Aux. Voltage,										
with	nout HB and/or										
with	out Analog Input	0									
12:2	4V ac-dc 70mA,										
wi	th HB and/or	4									
ŀ	Analog Input										
9	9 Input										
De	scription code	Numeric code									

Description code	Numeric code				
SSR	S				
0:10V dc	V				
4:20mA	A				
10 =====					

10	Firin	g
De	scription code	Numeric code
Zei	o Crossing ZC	Z
	Burst Firing	
4 Cy	cles On at 50%	
	wer Demand	4 <mark>(1)</mark>
	Burst Firing	
8 Cy	cles On at 50%	
Pc	wer Demand	8 <mark>(1)</mark>
	Burst Firing	
	cles On at 50%	
Pc	wer Demand	6 <mark>(1)</mark>

11 Control Mode								
otion code	Numeric code							
n Loop	0							
Fuse & (Option							
otion code	Numeric code							
Fuses IF	F							
Fuses +CT	Y							
d Fuses	Н							
T +HB								
13 Fan Voltage								
tion code	Numeric code							
110V	1							
Std Version	2							
	tion code n Loop Fuse & (otion code Fuses IF Fuses +CT d Fuses T +HB							

14	Approvals								
Des	cription code	Numeric code							
	C For European Market	0							
	For American ket, pending	L							
15	15 Manual								
Des	cription code	Numeric code							
	None	0							
lta	lian Manual	1							
Eng	glish Manual	2							
	man Manual	3							
Fre	nch Manual	4							
16	16 Version								
Des	Description code Numeric code								
	Std with fixed Fuses 1								

LEGEND IF = Internal Fixed Fuse CT = Current Transformer HB = Heater Break Alarm

Note (1): Available only with Analog input



CD Automation Tel: +44 (0)1323 811-100 Email: info@cdautomation.co.uk

Web: www.cdautomation.co.uk/revo-s-3ph